5. Printed Circuit Board Diagram

5-1 DVD MPEG

* TOP VIEW

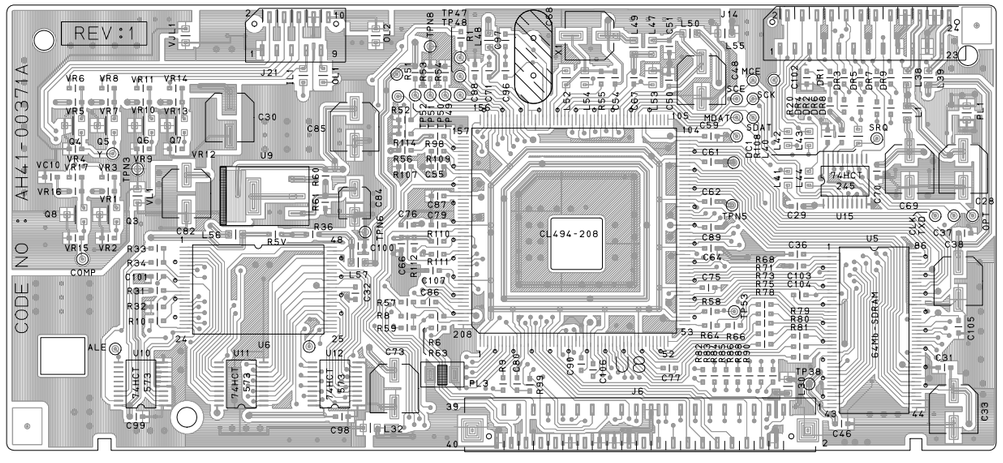

* BOTTOM VIEW

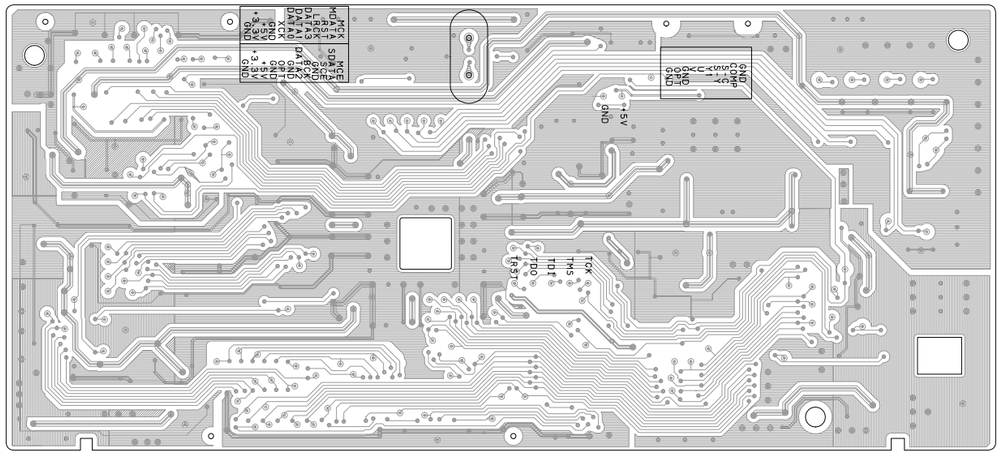

5-2 DVD LOADER

* TOP VIEW

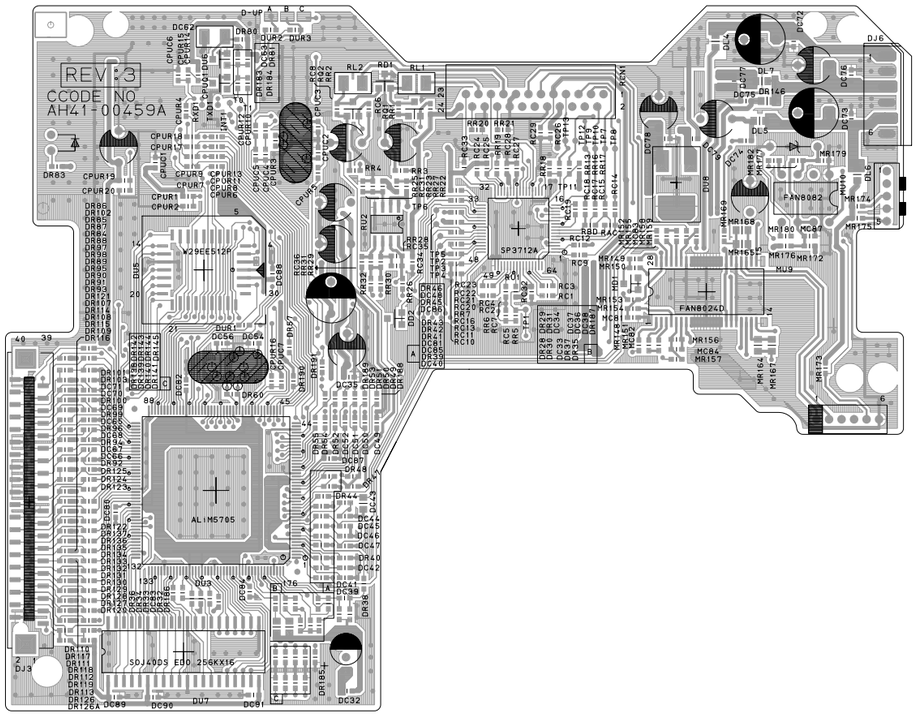

* BOTTOM VIEW

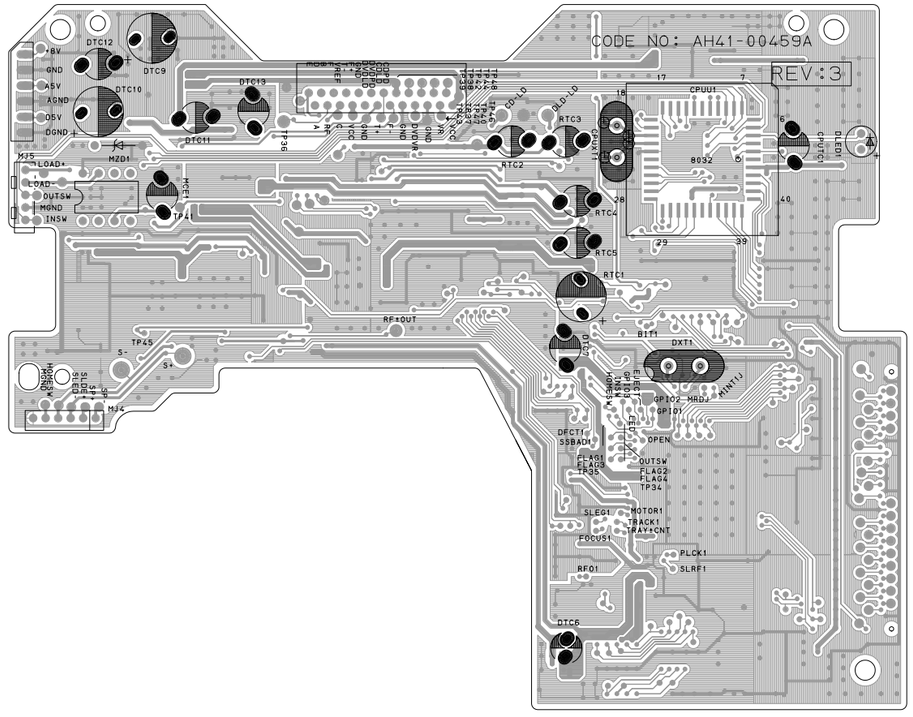

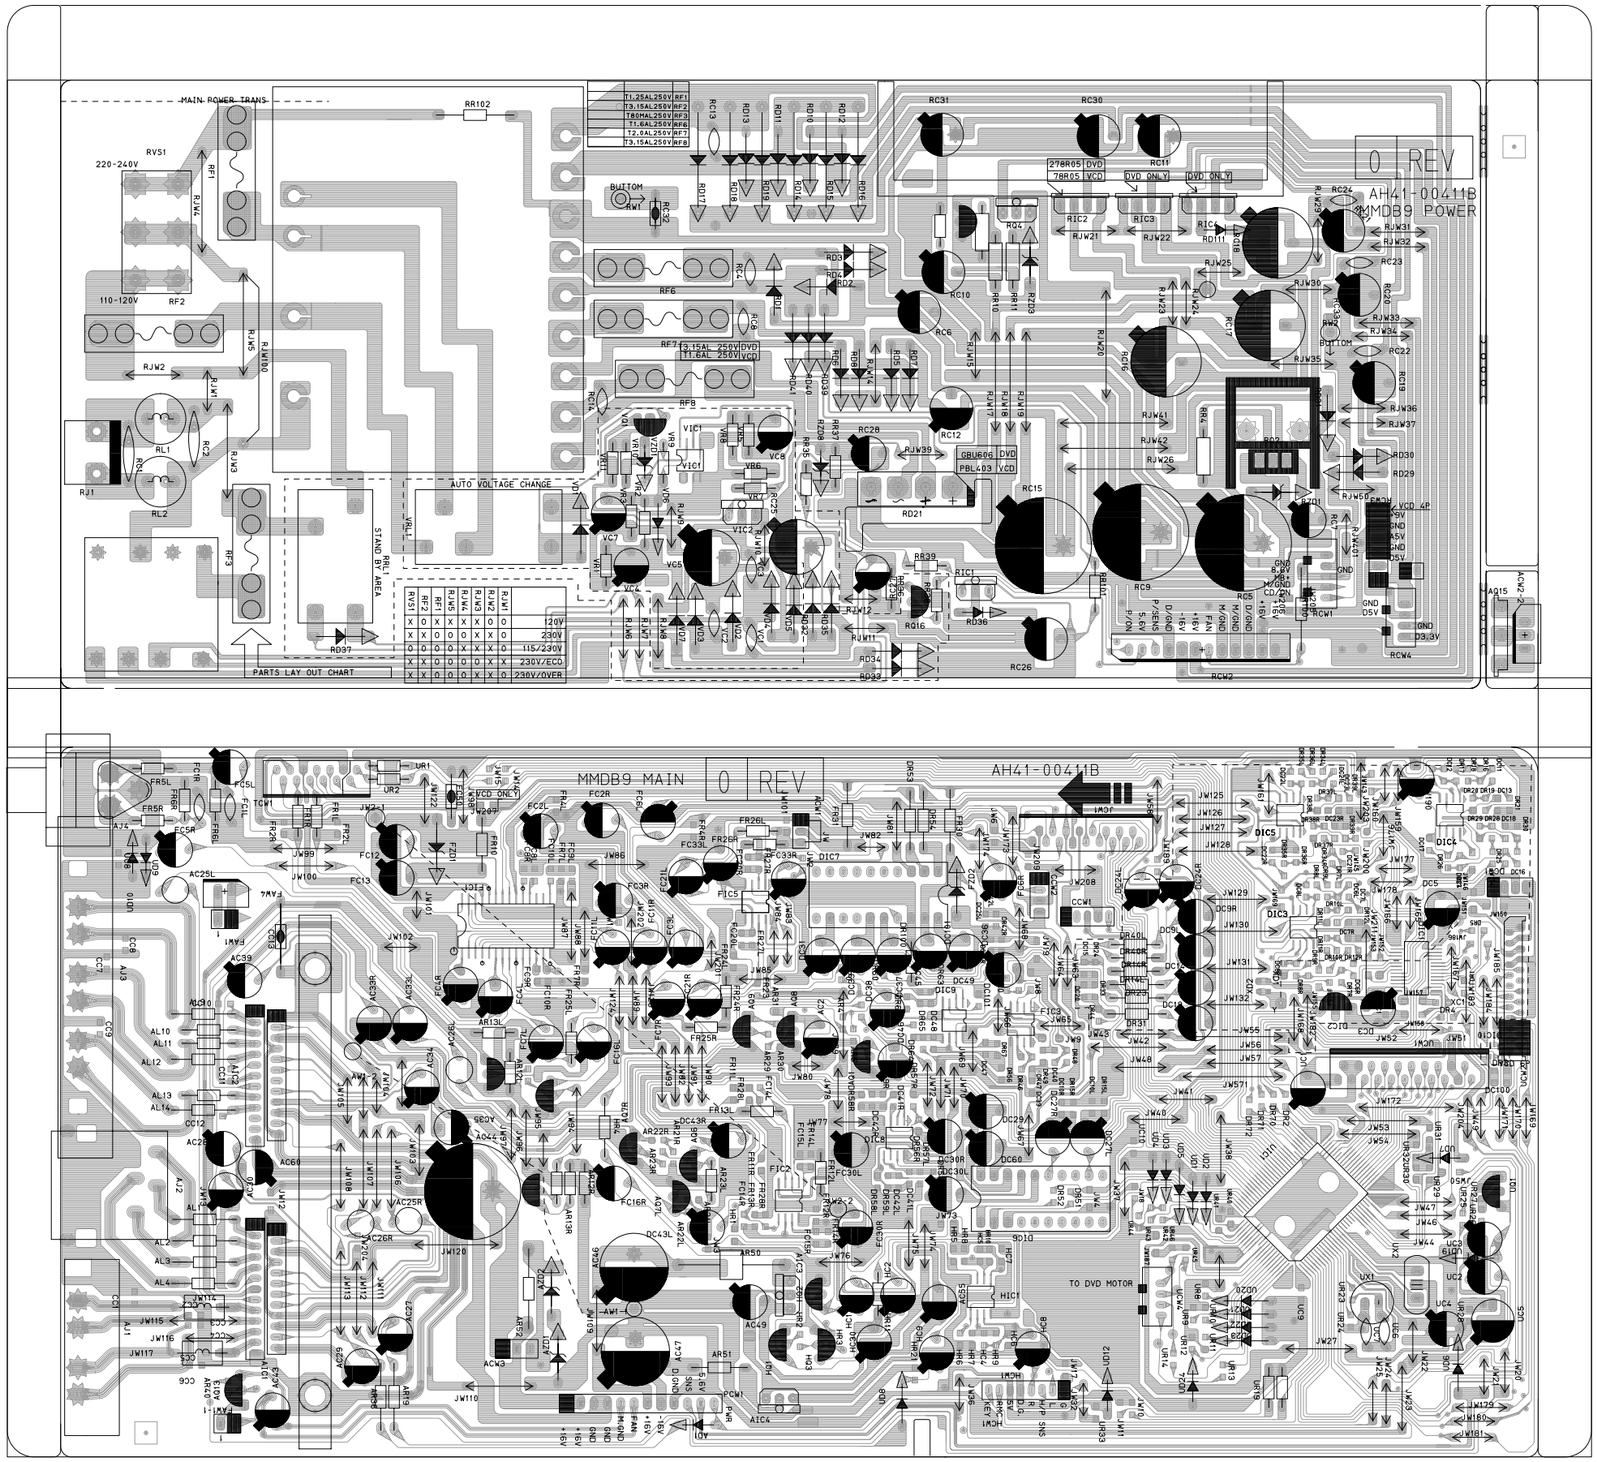
MAIN POWER TRANS
220-240V
110-120V
AUTO VOLTAGE CHANGE
STAND BY AREA
PARTS LAY OUT CHART
MMDB9 MAIN
0 REV
AH41-00411B
MMDB9 POWER
TO DVD MOTOR

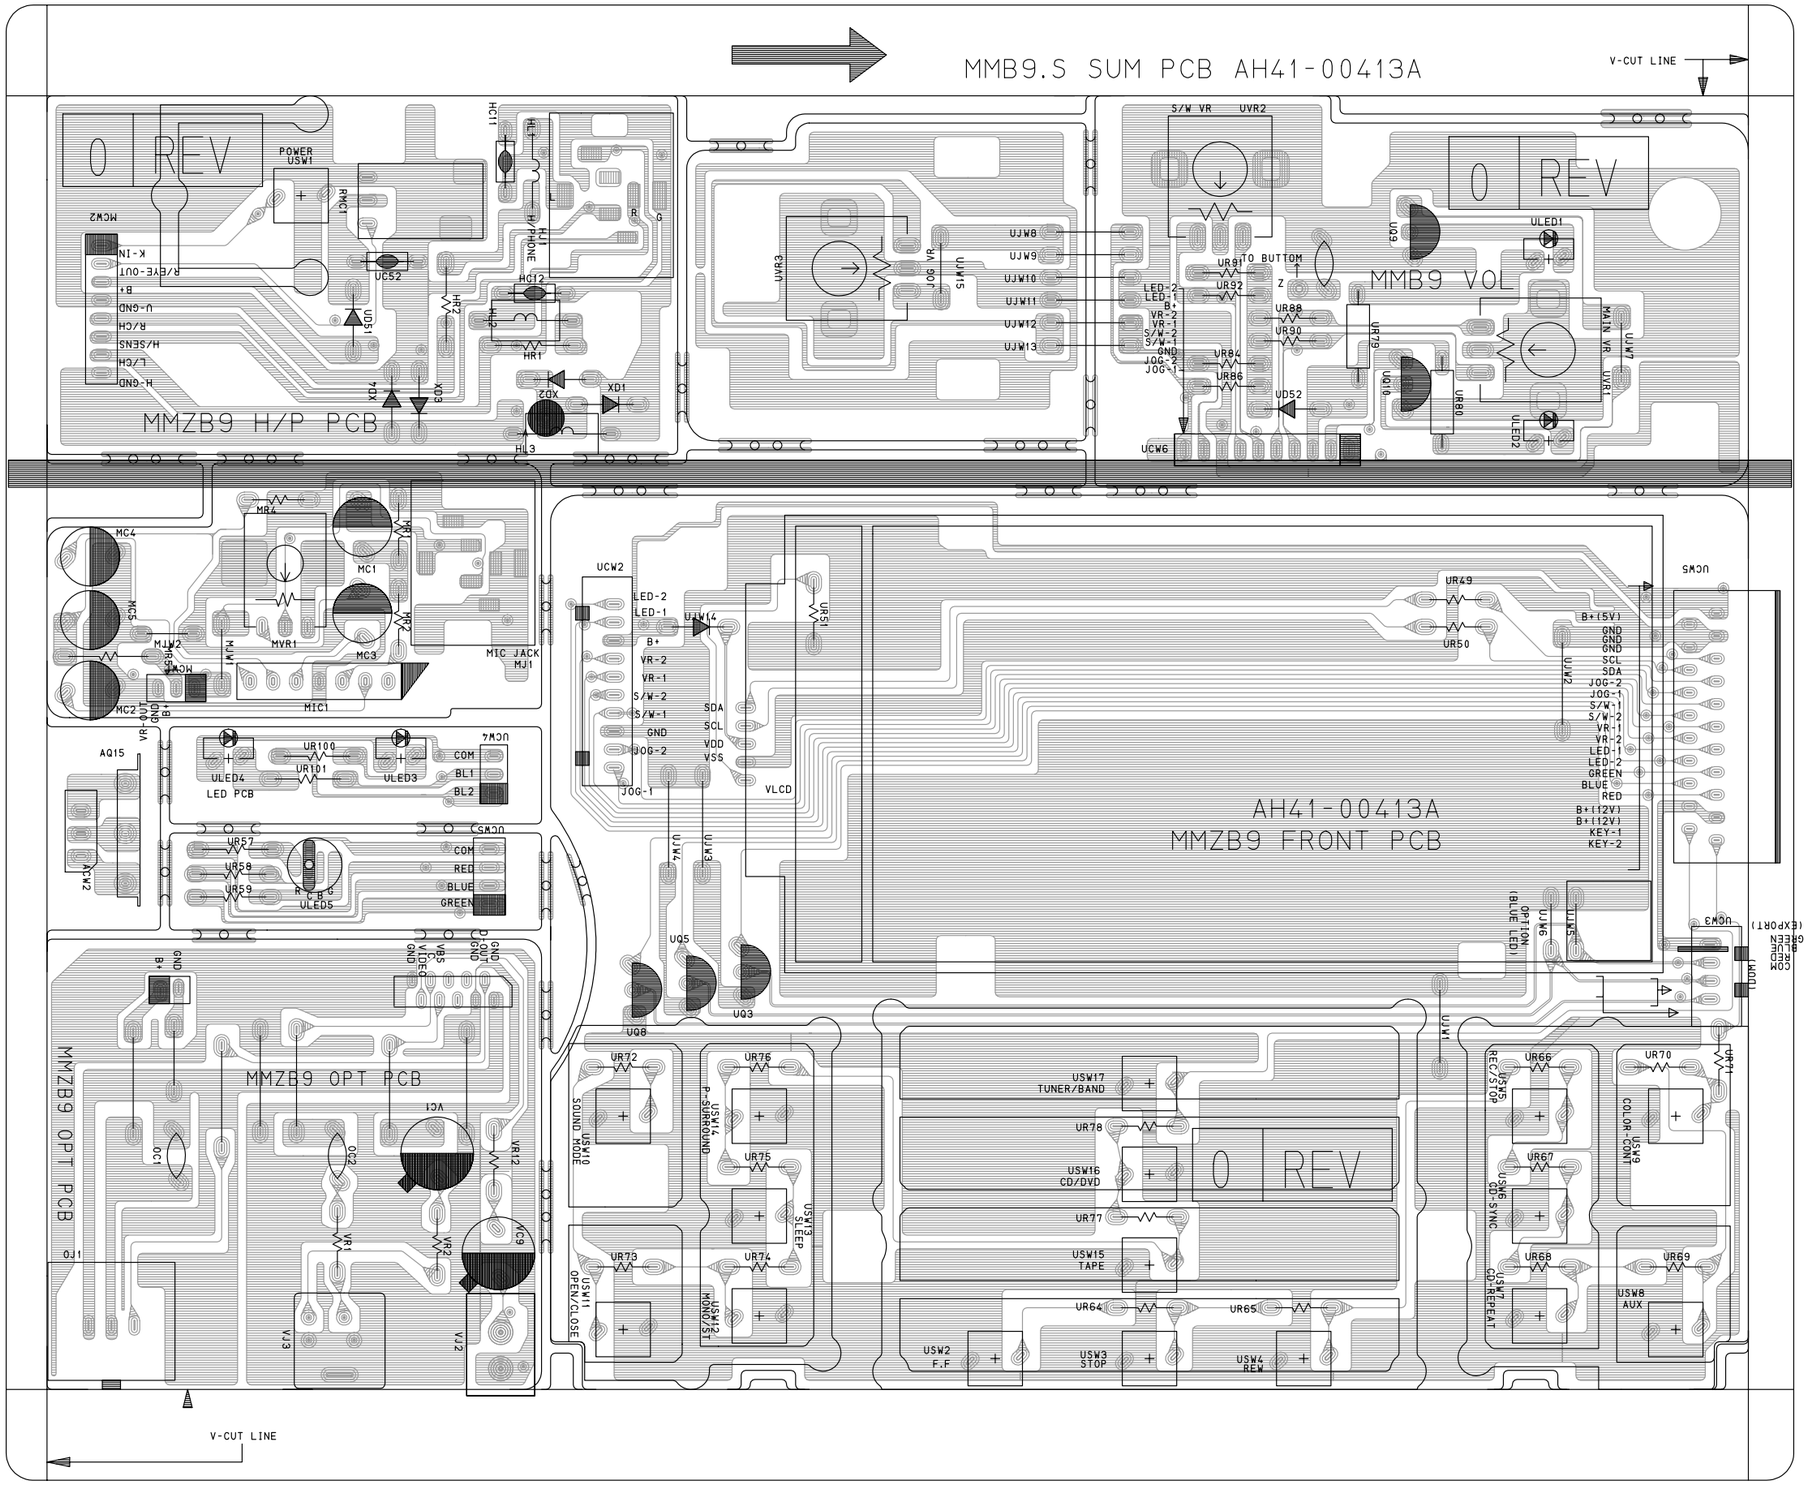
MMB9.S SUM PCB AH41-00413A
V-CUT LINE
MMZB9 H/P PCB
MMB9 VOL
MMZB9 OPT PCB
AH41-00413A
MMZB9 FRONT PCB
LED PCB
MIC JACK
POWER
S/W VR
MAIN VR
OPTION
(BLUE LED)
TUNER/BAND
CD/DVD
TAPE
F.F
STOP
REW
REC/STOP
CD-SYNC
CD-REPEAT
COLOR-CONT
AUX
SOUND MODE
P-SURROUND
SLEEP
OPEN/CLOSE
MONO/ST
0 REV

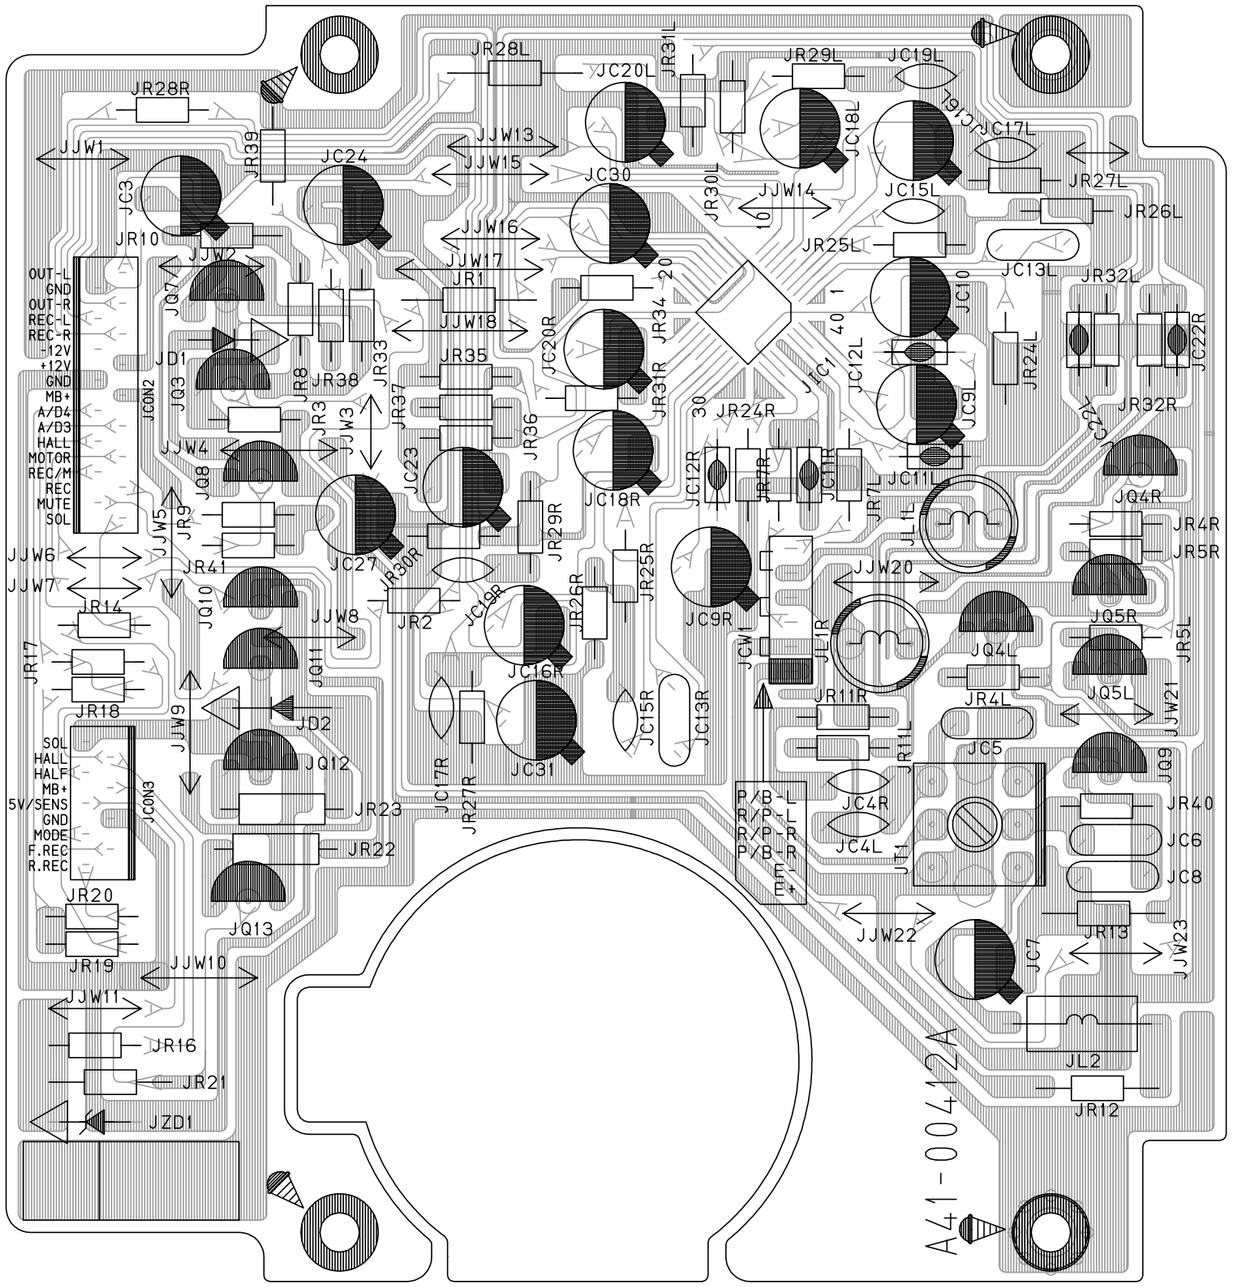
JR28L
JC20L
JR31L
JR29L
JC19L
JC16L
JC17L
JR28R
JJW1
JJW13
JJW15
JC24
JR39
JC3
JC30
JR30L
JJW14
JC18L
JC15L
JR27L
JR26L
JR10
JJW16
JJW17
JR25L
JC13L
JR32L
JC22R
JR1
JJW18
JC20R
JR34
JC10
JC12L
JR24L
JC9L
JR32R
JR35
JR31R
JR24R
JC12R
JR7R
JC11R
JC11L
JR7L
JC18R
JR4R
JR5R
JR29R
JR25R
JC27
JR30R
JR41
JR14
JR2
JC9R
JC16R
JR26R
JJW20
JQ4L
JR4L
JQ5R
JR5L
JR18
JC31
JC15R
JC13R
JR11R
JR11L
JQ5L
JJW21
JQ12
JR23
JC17R
JR27R
JC4R
JC4L
JC5
JQ9
JR40
JC6
JC8
JR22
JR20
JQ13
JJW22
JC7
JR13
JJW23
JR19
JJW10
JJW11
JR16
JR21
JL2
JR12
JZD1
A41-00412A
OUT-L
GND
OUT-R
REC-L
REC-R
-12V
+12V
GND
MB+
A/D4
A/D3
HALL
MOTOR
REC/M
REC
MUTE
SOL
JCON2
SOL
HALL
HALF
MB+
5V/SENS
GND
MODE
F.REC
R.REC
JCON3